








# MID-BACK LEATHER CHAIR

ITEM#:VL653SP11


## PARTS LIST

PART#		DESCRIPTION	Q'TY
A		BACK CUSHION	1PC
B		SEAT CUSHION	1PC
C		STEEL BASES	1SET
D		SCREWS (1/4*1")	8PCS
E		WASHERS	4PCS
F		PLASTIC CAPS	4PCS
G		ALLEN WRENCH	1PC


**ATTENTION:**  
Make certain that all screws are fully tightened before using the chair.

### START

- ① ATTACH SEAT CUSHION "B" TO STEEL BASES "C" USING SCREWS "D" AND WASHERS "E". REPEAT FOR THE OTHER STEEL BASE AS SHOWN. NOTE: DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.

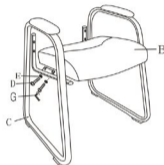

- ② ATTACH BACK CUSHION "A" TO STEEL BASES "C" USING SCREWS "D", TIGHTEN ALL THE SCREWS THEN COVER SCREW HOLES WITH PLASTIC CAPS "F" AS SHOWN, NOTE :DO NOT TIGHTEN ALL THE SCREWS FULLY AT ONCE.

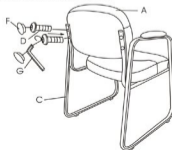

### COMPLETED

③

